

## **INSTRUCTIONS FOR LAMP SUPPORT WEDGE**

- 1. To secure the Support Wedge to your wood base, simply place the screw into the large fender washer provided. Then, using a Philips Head screw driver in a drill, tighten the screw into your wood base as shown. If you do not have a Philips Head drill attachment, you may drill a pilot hole first using a 5/64" drill bit. Then use a Philips screw drivert to tighten the screw.
  - 2. You may use the Lamp Support Wedge in conjunction with two Handy Wedges for a very stable positioning platform to do tack soldering of your stained glass components and lamps. SEE ILLUSTRATIONS BELOW.

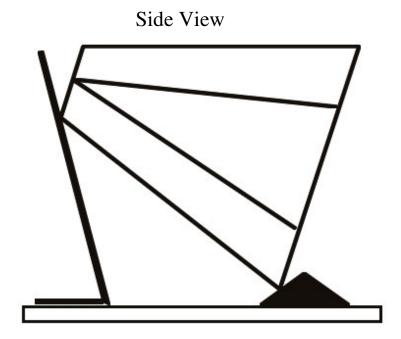

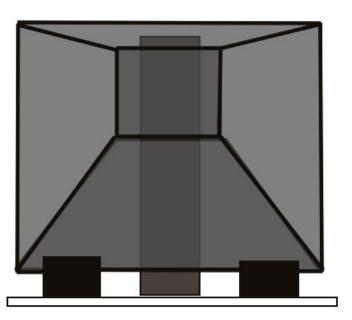

Front View

Creator's Stained Glass Inc. http://www.cuttersmate.com Ph. 847-477-3863 MADE IN USA

**COPYRIGHT 2012**